





CURRENT INFORMATION SUMMARY

Opening Instructions for the **Kodak MAX Water & Sport One-Time-Use Camera**


Wear eye protection when opening all cameras.

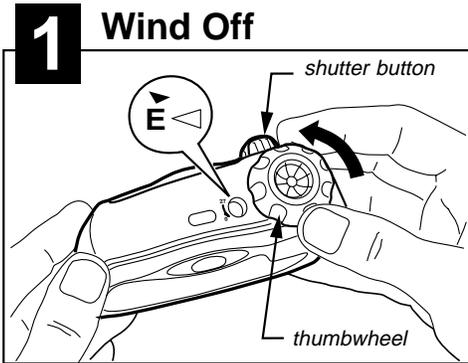


- Do not remove *thumbwheel*.
- Check frame counter to make sure "E" is aligned with the arrow.
- If not, grip camera and cover the lens with your hand; then press *shutter button* and turn *thumbwheel* until film is fully rewound.

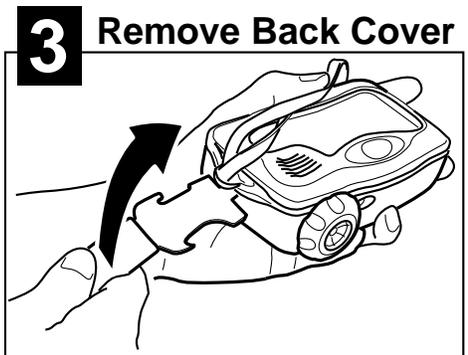


- Insert tool end securely into the camera-back slot below the strap post.
- Hold camera steady and lift tool directly up to disengage the door snaps.
- Pry off the back cover.

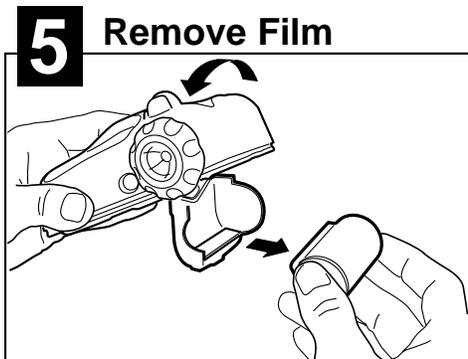

- Invert camera to remove film.

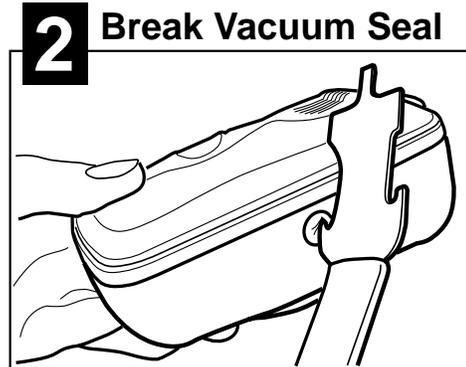

- Insert sharp edge of hand tool into the vacuum-seal circle on bottom of camera to release pressure.

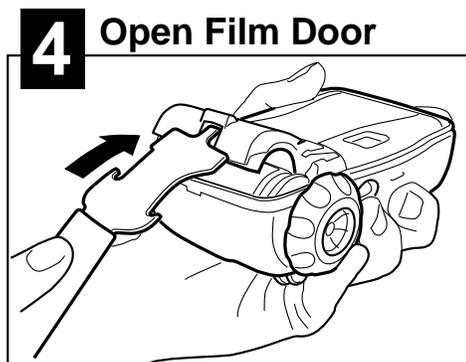

- Insert tool end into the film-door slot.
- Pry the film door up to open.

- 6**
- Place used camera in the Kodak recycle bin.
 - Visit our Web site at <http://www.kodak.com/go/kes> for details about Kodak's recycling program.
 - Call Kodak's advertising distribution center at (800) 847-8755 to order a Kodak hand-opening tool.

CAUTION: Before you attempt the opening tasks, make sure the tool is fully engaged with the camera body to prevent tool slippage.

Current Information Summaries provide information of limited or specific application. Responsibility for judging the timeliness and applicability of the information to a specific photographic use rests with the end user.

Consumer Imaging
EASTMAN KODAK COMPANY • ROCHESTER, NY 14650



CIS-225

Kodak and Max are trademarks.

Opening Instructions for the KODAK MAX
Water & Sport One-Time-Use Camera

New 2-02